

**ZENTRON**

# **ZENTRACE GUIDE**

## 1. Turn on the device WiFi




- Long press the Menu button to enter the main menu
- Select the WiFi option
- Press the Menu button to turn on WiFi

**Note:** Please remember the device's SSID, for example:

C50CN000000. This will be the name of the device's WLAN (WiFi).


## 2. Connect the device to the ZENLINK App

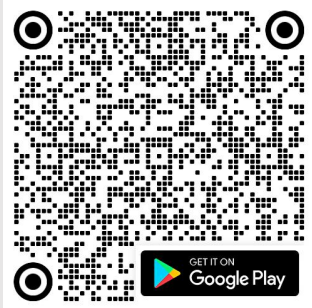

Scan the QR code above or use the link below to download and install the ZENLINK App:


GooglePlay: <https://play.google.com/store/apps/details?id=com.zentron.zenlink>

App Store: <https://apps.apple.com/us/app/zen-link-zentron/id6450763142>

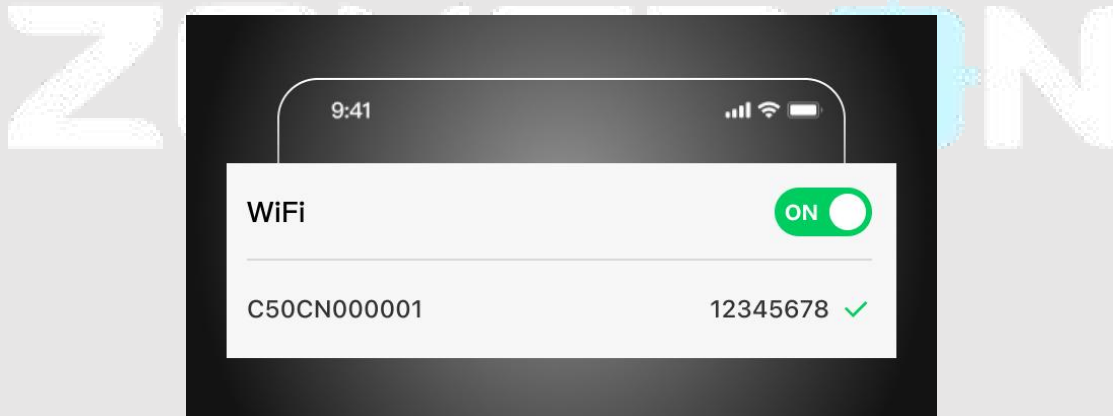


- Open your phone's WLAN (WiFi) settings, find the WLAN (WiFi) with the same name as the device's SSID, and connect. The default password is: **12345678**
- Return to the ZENLINK App and wait for the device to complete the connection.

### 3. Enable Device Bluetooth

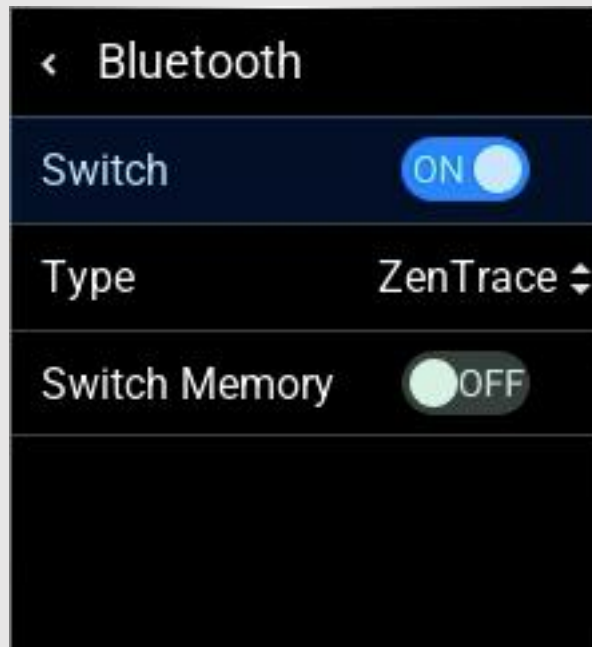

- Turn on the Bluetooth switch.
- Select “ZenTrace” mode.
- Optional: Enable Bluetooth memory to automatically turn on Bluetooth at the next startup.

- Wait for the device to automatically connect to the app.

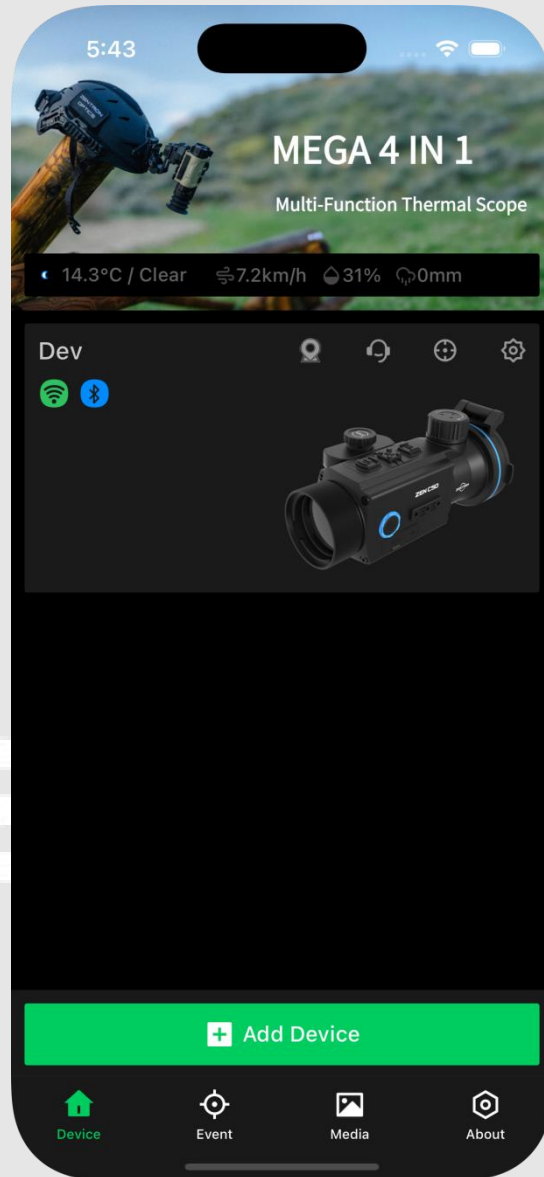

- When the Bluetooth icon turns blue, the device is successfully connected.

## 4. Access ZENTRACE Function

- In the app's device list, tap the function icon on the device card.




- Enter the function interface and ensure the phone's GPS, Bluetooth, and cellular data are enabled and functioning properly.




## 5. Operation Guide

- Manual Mode
- Tap the button at the bottom right corner of the screen to enter Manual Mode.
- You can manually mark target locations.

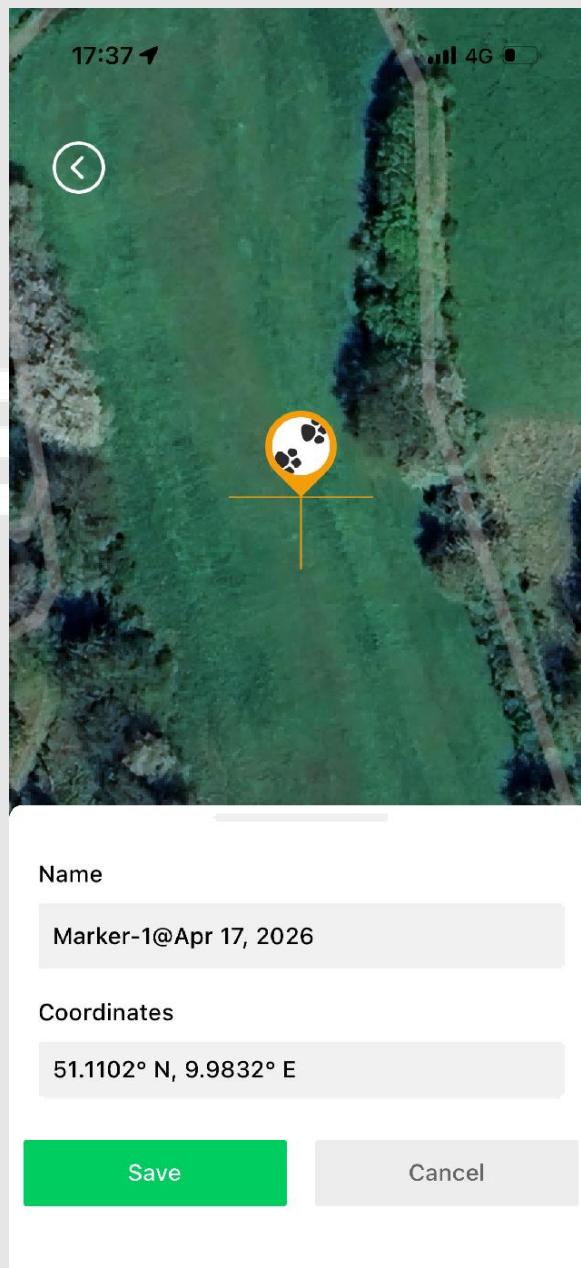

- Swipe up the pop-up panel to edit marker information.

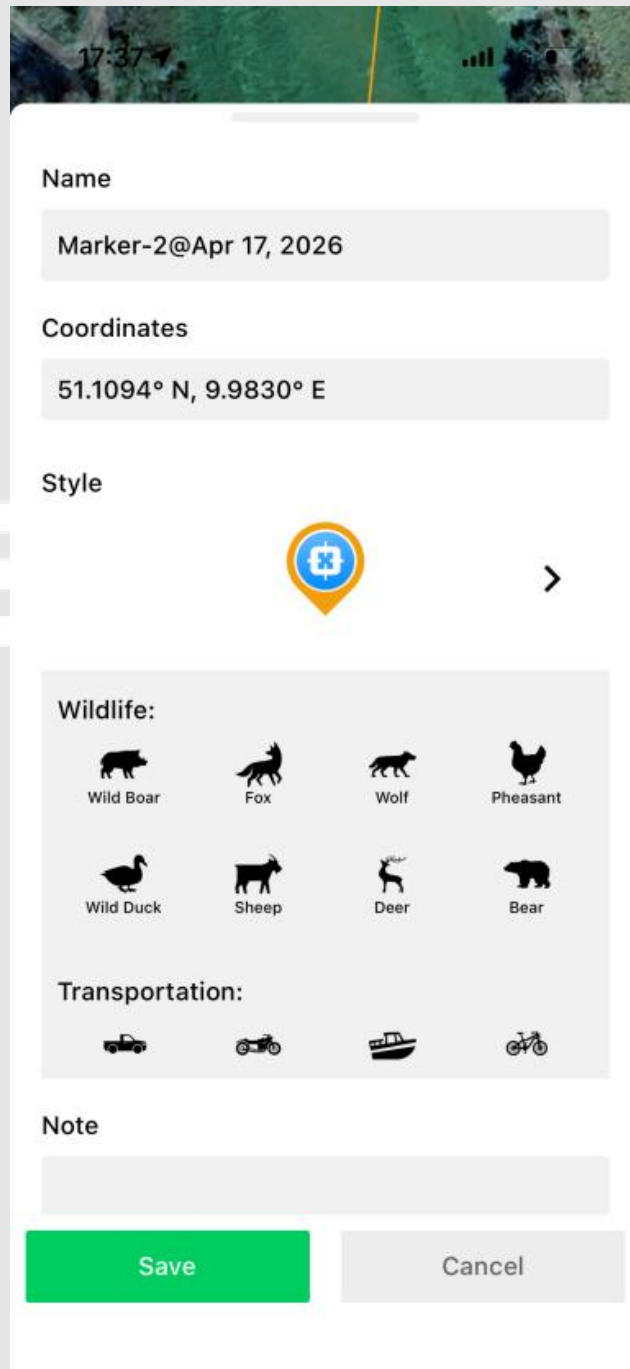

- Auto Mode
- When the device is connected, a marker will be automatically generated upon firing.
- The marked location will be displayed on the map.

